


Changing the Ali-latches handing

Step 1:

Remove the four screws, two on either side.

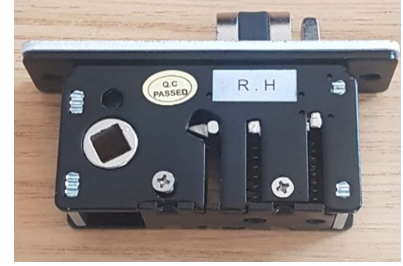


Step 2:

Pry the back plate off, using a flat headed screwdriver.



Step 3:

Remove the two coil springs, as well as the latch bolt and anti-thrust pin.

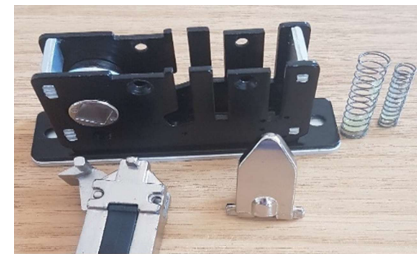

Step 4:

Remove the pin on the latch bolt, using a screwdriver. Push on the smaller ended side in order to remove the pin completely. The latch tail piece should come loose.



Step 5:

Flip the latch tail piece to the other side, being careful that the spring remains in place. Reinsert the pin that was previously removed.



Step 6:

Reinsert the anti-thrust pin and the latch bolt that as shown. Place the springs back in place where they were previously found, replace the back plate and reinsert the screws.

