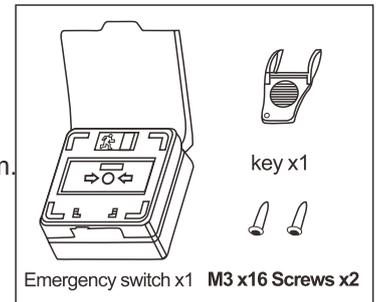


## ※ Features

- 1.Resettable design, LED indicators around the edge of the unit
- 2.Press the outside plate to enable the output function
- 3.The outside plate will show the status (Green or Red)
- 4.Reset key with non-slip design
- 5.Input power range from DC12-24V to connect with all types of fire alarm system.
- 6.Built-in buzzer status can be set as silent, intermittent or continuous.  
The volume is adjustable.
- 7.Easy to assemble, outer case has no screws, 3 sets of output points to connect other equipment, flush or surface mount installations.

## ※ Accessories

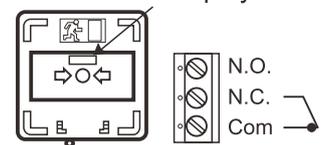


## ※ Specifications

Item	Model	Parameters		Note
Power supply		DC 12V~DC 24V	×	±5 %
Operation current		DC 12V/18mA(Standby)/75mA(Operation)	×	±5 %
		DC 24V/11mA(Standby)/41mA(Operation)	×	±5 %
Buzzer		Set as silent, intermittent, or continuous	×	
Indicator		Dual-colour (red and green). Red indicator to set blinking , off or on.	×	
Output		N.O. N.C.& COM.Output (Maximum load of 125V/3A)		
Weight		192g		
Dimensions		90mm(L)x93mm(W)x64mm(H)		
Material		ABS,PC(transparent part)		


### 【Standby】

Status display:Green




### 【Operation】

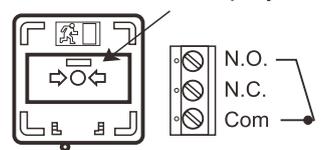
Status display:Red



## ※ Connections

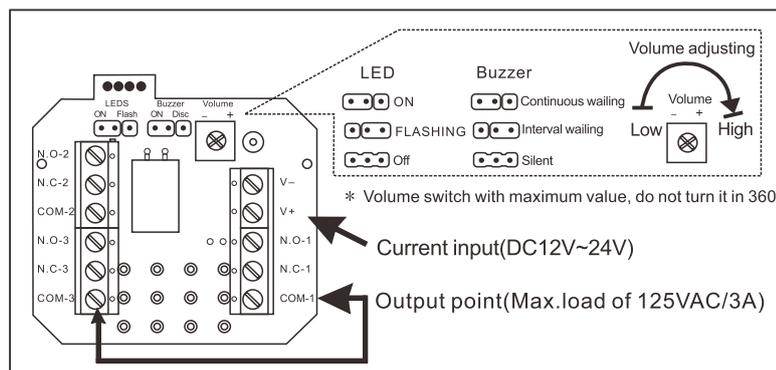


## ※ Wiring Diagram

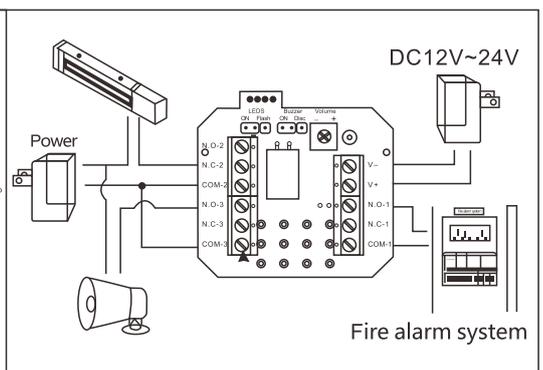

## ※ Attention before installation

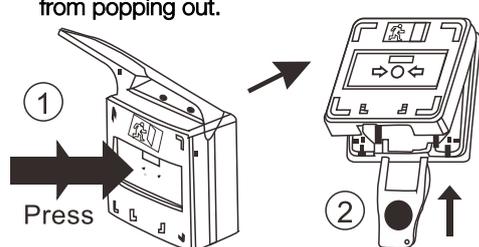
⚠ Please depress the outside plate to make sure the indicator flag turns red before opening the front and middle covers to prevent the spring from popping out.



1 Press


2

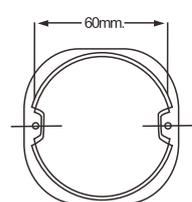▲ Fixing Holes for flush mount installation are set at 60mm



60mm





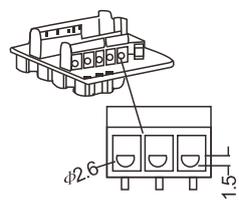
▲ Terminal opening is restricted as shown below









φ2.6  
1.5

# ※ Installation
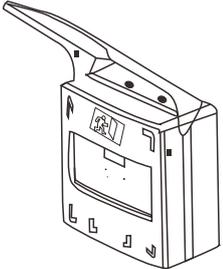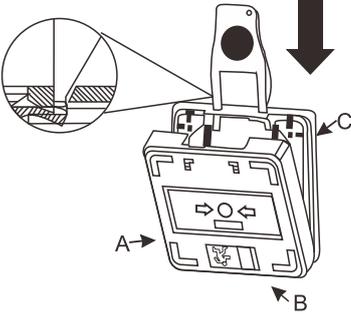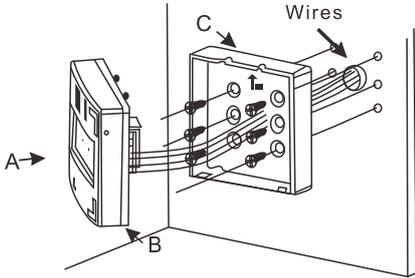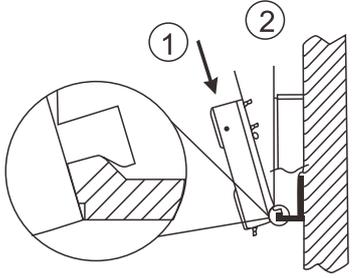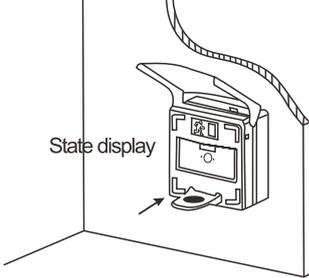
## Surface Mount Installation

<p>Installation steps</p> <p>Completed</p> 	<ol style="list-style-type: none"> <li>  <p>Use the key supplied to disassemble B and C fixings</p> </li> <li>  <p>Fix bottom cover C and connect the wires</p> </li> <li>  <p>Fix the unit as shown in the diagram above</p> </li> <li>  <p>Insert the key into the key hole. Pull the key out when the flag turns green to complete the setting</p> </li> </ol>
--	---

## Flush Mount Installation
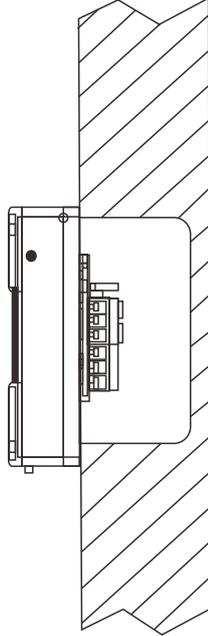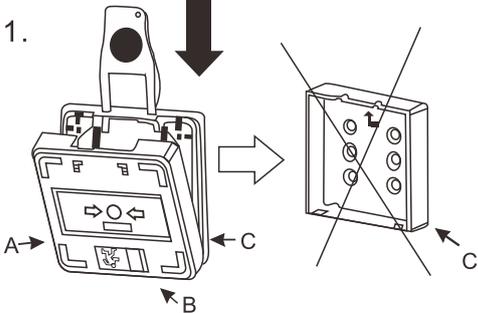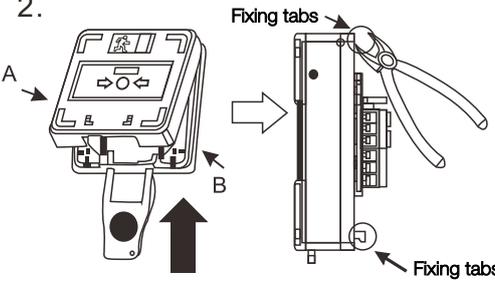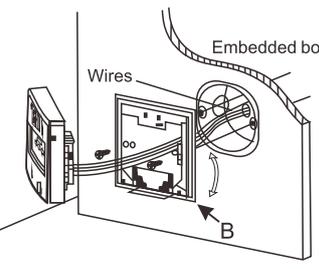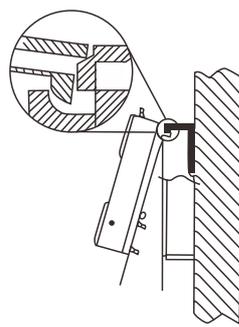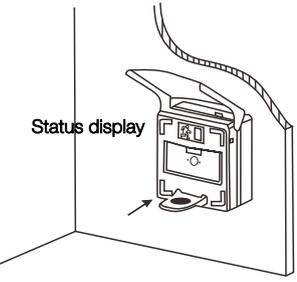
<p>Installation steps</p> <p>Lateral view</p> 	<ol style="list-style-type: none"> <li>  <p>Use the key supplied to disassemble B and C fixings</p> <p>No bottom C cover is required for flush mounting</p> </li> <li>  <p>Use the key supplied to disassemble A and B fixings</p> <p>Remove the fixing tabs not required for flush mounting</p> </li> <li>  <p>Fix the middle cover B and connect the wires.</p> </li> <li>  <p>Fix the unit as shown in the diagram above</p> </li> <li>  <p>Insert the key into the key hole. Pull the key out when the flag turns green to complete the setting</p> </li> </ol>
---	--